

USER'S MANUAL



INDEX



- a. Foreword
- 1) Cover the basics

02

- b. Safety Precautions
- 1) Warning
- 2) Attention
- 3) Safety

05

- c. About your heat pump
- 1) Transportation
- 2) Accessories
- 3) Features
- 4) Operating range
- 5) Introduction of
- different modes
- 6) Technical Parameter



d. Installation Guidance

Ventilation Requirements

- 1) Installation reminder
- 2) Placing the unit and
- Water connetions
- 3) Wiring requirements4) Electric wiring diagram
- 5) Installation options

- 24
- e. Operation Guidance
- 1)Key Function
- 2) Screen Display
- 3) Operation Instructions
- 28
- f. Testing
- 1) Heat pump checks before use
- 2) Leakage detection notice and method
- 3) Trial
- 4) Running Status Check
- 5) Paramters checking
- 6) Parameters table



g. Commissioning



h. Maintenance

- 35
- i. Troubleshooting for common faults
- 40
- j. Wi-Fi operation



I. Product Purchase Warranty Registration

a. FOREWORD

Thank you for choosing the **Madimack** high efficiency inverter pool heat pump!

All our heat pumps are built and designed to the highest standard and are protected by our extended warranty service for peace of mind.

Warranty registration is required to be submitted online in conjunction with the commissioning page and warranty registration page in the Appendix section at the back of the booklet www.madimack.com.au/warranty-registration.

Please read and fully understand all information provided before attempting to install the pool heat pump.

For technical questions and further information please contact support@madimack.com.au.

We hope you enjoy using our heat pumps.

Thank you!

COVER THE BASICS:

- 1. Check that you have received the package in good condition
- Every residential heat pump comes with two accessory boxes and the manual. The manual will mention all the parts and where they belong to make sure that the unit is commissioned, as per the 'commissioning' section, and that adequate water flow rate is provided
- 3. Keep the surroundings of the unit clear of any debris, tree branches, and anything that can affect the ventilation of the unit
- 4. Keep the invoice/packing slip in a safe place.
- 5. Register the unit for warranty as per the warranty section in this manual
- 6. Ensure that the unit is installed in an outdoor area, if it must be indoors the unit will need to be ducted to the outside
- 7. The condensate drain will need regular check-ups for any blockages or debris build ups, keeping it clean allows the condensate drain to escape easily to drainage
- 8. For Wi-Fi control make sure that you have full Wi-Fi strength in the heat pump area, more than -50 DB is recommended for strong connection
- 9. Make sure that the unit is installed as per the ventilation diagrams to ensure efficient heating rates

b.

Safety Precautions


We have provided important safety messages in this manual for the installation, maintenance, and repair of your heater.

Please read thoroughly and obey all safety messages.

1.Warning



This WARNING sign denotes a hazard. It calls attention to a procedure, practice, or the like, which, if not correctly performed or adhered to, could result in personal injury or injury to a third party. These signs are rare, but are extremely important.

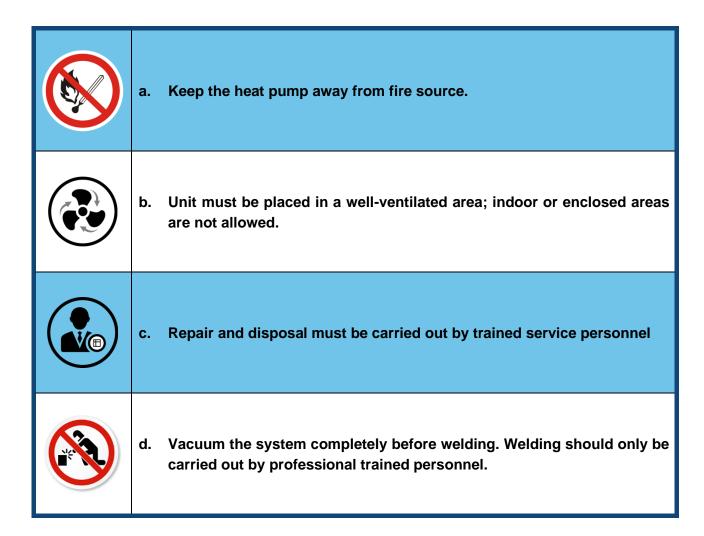

2. Attention

- a. Please read the following instructions before installation, use and maintenance.
- b. Installation must be completed only by competent persons only, and in accordance with this manual.
- c. Check all water connections are sealed and tested before operating the machine
- d. Except for the methods recommended by the manufacturer, do not use any methods to accelerate the defrosting process or clean the frosted parts.
- e. If a repair is required, please contact the nearest after-sales service center. The repair process must be strictly in accordance with this manual. Repairs made by unauthorized persons may void the warranty.
- f. Correctly set temperature required for personal preference making sure to avoid overheating or overcooling.
- g. Please do use or stack substances or other materials which may block the air flows to the inlet or outlet areas. This causes the efficiency of the heater to be reduced, and may damage the machine.
- h. Do not use or stock combustible gas or liquids such as thinners, paint and fuel, to avoid fire!
- i. In order to optimize the heating effect, please install heat preservation insulation on pipes between swimming pool and the heater, and please use a recommended cover on the swimming pool.
- j. Connecting pipes of the swimming pool and the heater should be less than 10m.

3. Safety

- a. Please keep the main power supply switch out of reach from the children.
- b. If power is suddenly disconnected during operation, and later the power is restored, the heater will start up automatically.
- c. Please switch off the main power supply in high storm weather to prevent the machine from damage that could be caused by lightning strikes.
- d. Any repairs should be carried out in a well-ventilated area. Any source of ignition is prohibited during the inspection.
- e. Safety inspection must be carried before the maintenance or repair for heat pumps with R410A gas in order to minimize the risk.


C.

About your heat pump

1. Transportation


Always keep upright

use a forklift to transport.

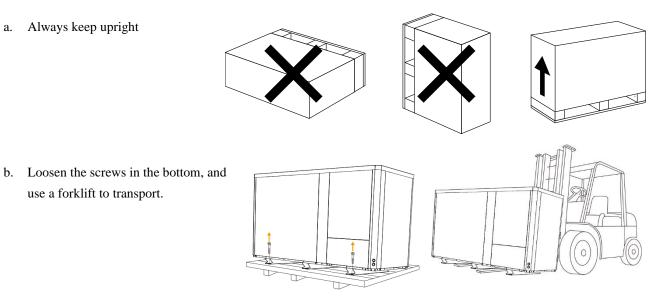


c. Do not lift by the water unions, otherwise, the titanium heat

exchanger inside the heat pump may be damaged.

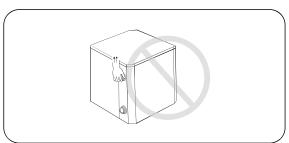

2. Accessories:

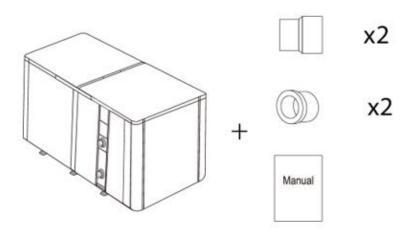

3. Operating condition and range:

To provide you comfort and pleasure, please set swimming pool water temperature efficiently and economically.

The heat pump can work between air-15°C \sim 43°C, and its ideal operation range is between air 15°C \sim 25°C.

4. Introduction of different modes:

- a. The heat pump has two modes: Boost and Silent.
- b. They have different strengths under different conditions.

Mode	Modes	Strength	
		Heating capacity: 20% to 100% capacity	
41	Boost mode	Intelligent optimization	
		Fast heating	
4	63.	Heating capacity: 20% to 80% capacity	
41	Silent mode	Sound level: 3dB (A) lower than Boost mode	

5. Technical parameter


Model	EM600	EM1200			
PERFORMANCE CONDITION: Air 27°C/ Water 27°C/ Humid. 80%					
Heating capacity (kW)	60.2 117.0				
Average COP at 50% Speed	11.1	11.2			
PERFORM	MANCE CONDITION: Air 1	5°C/ Water 26°C/ Humid. 70%			
Heating capacity (kW)	40.1	80.8			
Average COP at 50% Speed	7	7			
PERFORM	MANCE CONDITION: Air 3	5°C/ Water 28°C/ Humid. 80%			
Cooling Capacity (kW)	26.8	53.5			
	TECHNICAL SPECI	FICATIONS			
Operating air temperature ($^{\circ}$ C)	-15°C~43°C				
Fan direction	Vertical				
Power supply		400V/3Ph/50Hz			
Rated input power (kW)	2.10~8.18 4.25~17.0				
Rated input current (A)	3.05~11.9	6.16~24.7			
Max input current (A)	19	38			
Sound level at 1m dB(A)	53.0~61.0	55.0~64.0			
Sound level at 10m dB(A)	33.0~41.0 35.0~44.0				
Advised water flux (L/min) ±20%	400 800				
Water connection (mm)	65	80			
Net dimension LxWxH (mm)	1000x1110x1260	2100x1090x1280			
Net Weight (kg)	212	448			

Remarks:


This heat pump is able to perform normal within air temp -15 $^{\circ}$ C \sim 43 $^{\circ}$ C, efficiency will not be guaranteed out of this range. Please take into consideration that the pool heater performance and parameters are different under various conditions.


Related parameters are subject to adjustment periodically for technical improvement without further notice. For details please refer to nameplate.

6. Dimension

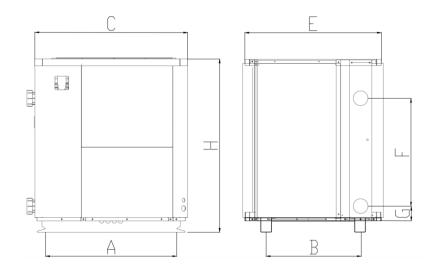

Size (mm) Name Model	A	В	С	D	Е	F	G	Н
EM600	1000	660	1110	1070	1000	780	105	1260

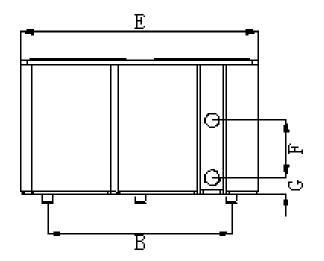

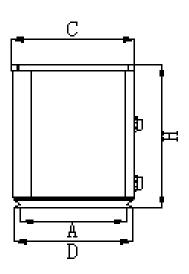


Size (mm) Name Model	A	В	С	D	E	F	G	Н
EM1200	1000	1630	1090	1050	2100	515	140	1280

d.

Installation Guidance

Ventilation requirements

1st case: Single unit – 3 obstacles

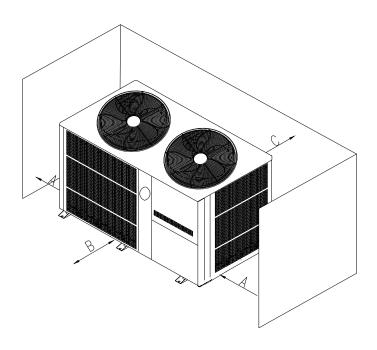


Model number	EM600	EM1200
Distance A (mm)	1250	1250
Distance B (mm)	1250	1250
Distance C (mm)	1400	1400

Please note that these are absolute minimums distances and where possible should always have a greater difference. Under no circumstances should any of the distances be reduced as performance will be affected. More ventilation is better.

Please note that the diagram above assumes that it's a clear top with no obstacles.

2nd case: Single unit – 3 obstacles

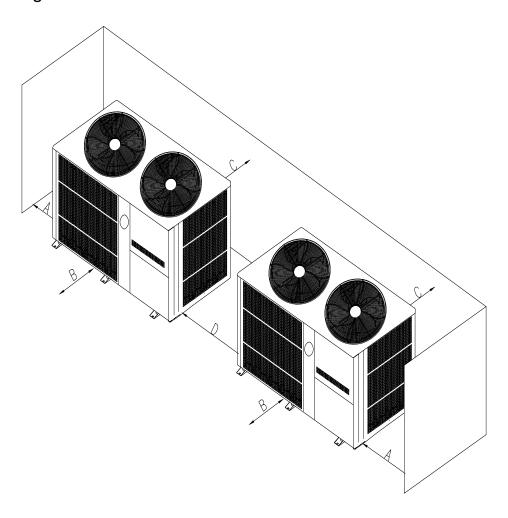


Model number	EM600	EM1200
Distance A (mm)	1250	1250
Distance B (mm)	1250	1250
Distance C (mm)	1400	1400
Distance D (mm)	2500	2500

Please note that these are absolute minimums distances and where possible should always have a greater difference. Under no circumstances should any of the distances be reduced as performance will be affected. More ventilation is better.

Please note that the diagram above assumes that it's a clear top with no obstacles.

Plumbing Multiple units:

Multiple heat pumps acting as one system should be connected in Cascade (Parallel Connection). Adequate flowrate should be provided to all the units in the system to ensure efficient heating (Please refer to the commissioning section in the manual to learn about heat pumps commissioning). The diagram below represents the cascade connection

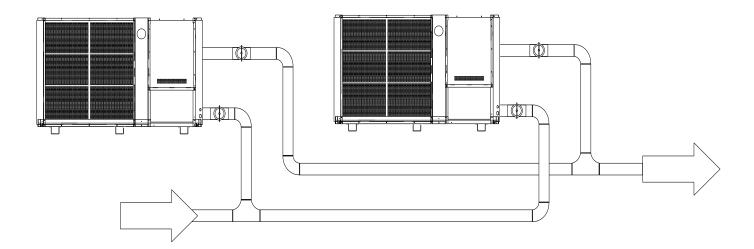

1. Installation reminder

Only competent persons are authorized to install the heat pump and should be educated with the relevant building codes and standards of their current state or local governing body for all electrical, mechanical and water services to prevent danger or damage to the unit.

a. Location and water pipe connection




The inverter pool heat pump must be installed in a well-ventilated place.

b. Typical installation diagram

Installations can differ dependent on-site conditions below is only a representation of one possibility.

Note: the inlet and outlet positions for the pipework is a representation only and can be positioned differently

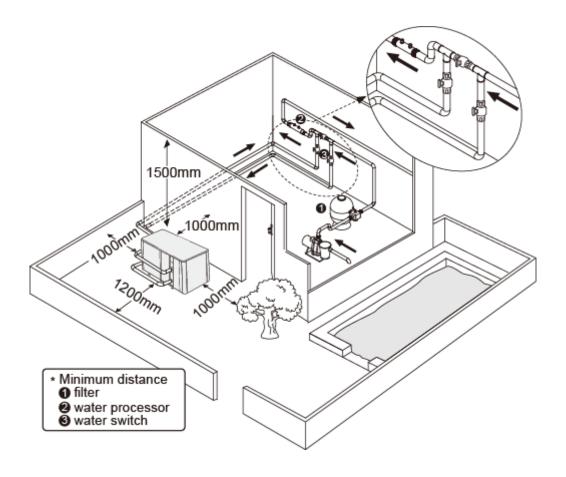


2. Placing the unit and water connections

a. Placing the unit and fixing

- The frame must be fixed by bolts (M10) to a concrete foundation or brackets. The concrete foundation must be solid and fastened; the bracket must be strong enough and anti-rust treated.
- Do not stack substances that will block air flow near the inlet or outlet area, and there should be no obstruction within 50cm behind the machine. Suffocation of air reduces the efficiency of the heater and could damage the unit.
- The machine may need an additional pump (not supplied). The recommended pump must adhere to the specification-flux of the machine, please refer to the technical parameters.

b. Water connections

• The inlet and outlet water unions should not be installed with soft flexible pipes. The heat pump **must** be connected with rigid pipes!

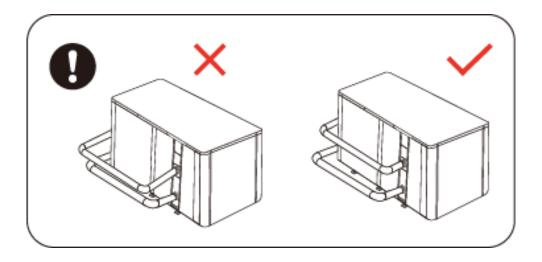


3. Wiring requirements


- a. Connect the heat pump to an appropriate power supply, the voltage should comply with the rated voltage of the product.
- b. The machine **must** be earthed
- c. Wiring must be handled by a professional technician according to the circuit diagram.
- d. Install electrical protection device according to local code for wiring
- e. The layout of power cable and signal cable should be orderly and not affecting each other.

Step 1. opening the maintenance panel


① Remove three screws outside

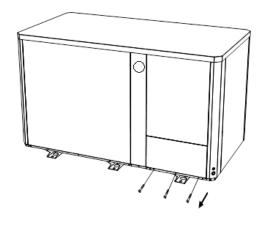


② Open the panel

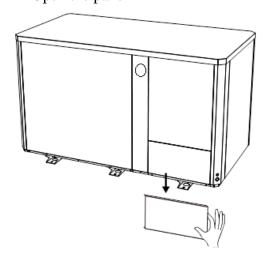

3 Remove two screws inside

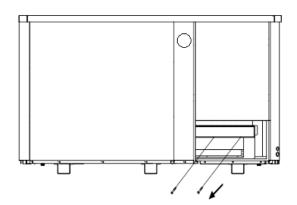


④ Open the internal

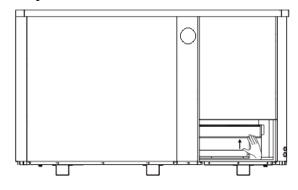


Step 2. Power cord must be passed through below 3 holes


 \bigcirc Connect the wire through three holes

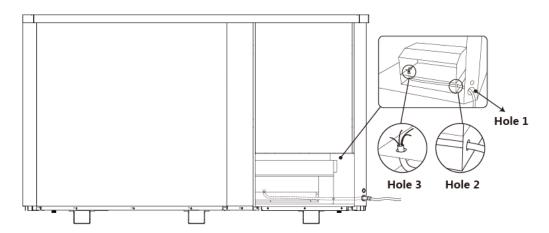


2 Restore the internal panel

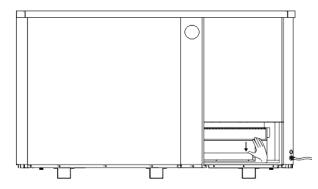


3 Fix the internal panel by two screws

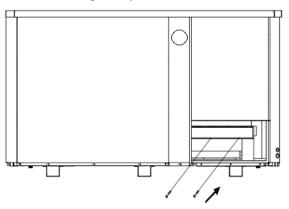

A Restore the panel

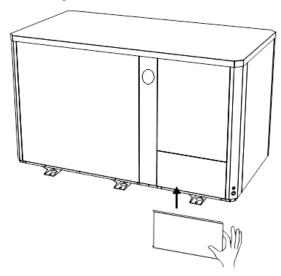


⑤ Fix the panel by three screws

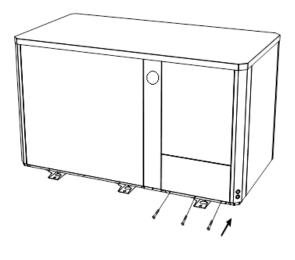

4. Electric wiring Diagram

For power supply: 400V 50Hz

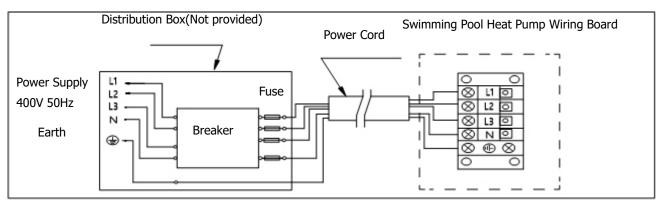

Note: 1) Must be hard wired, plug is not allowed.


2) The swimming pool heat pump must be earthed

Current protection devices must be installed in accordance with local electrical regulations

5.Installation options

Flow switch activated heating


The heat pump is activated by the flow of water initiated from the filtration/circulation pump, if the heater gets to temperature within the timers the unit will first start to use the inverter technology to slow the machine down to maintain the temperature and eventually to a stop.

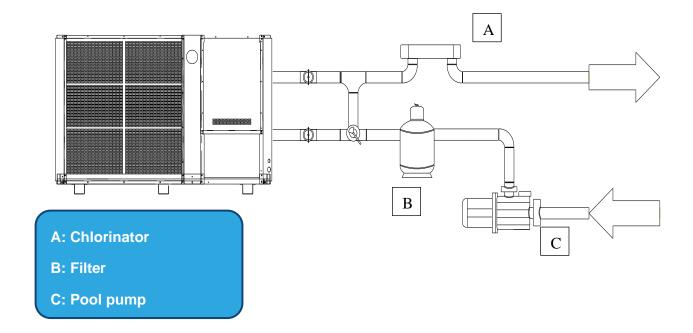

- 1. Chlorinator controller initiates the filtration pump.
- 2. Heat pump's flow switch senses the water flowing through the heat pump.
- 3. Heat pump starts and will run until temperature is reached or filtration pump switches off
- 4. No additional internal wiring to the heat pump is required in this set up
- 5. No additional settings needed to be changed
- 6. If circulation pump is not running and no flow is detected unit will display E3 this is normal and an indication the unit is sitting idle waiting for the filtration pump to start again.
- 7. If the pool temperature is not reached within the filtration times you may need to extend the timers to match the heating requirement.

 Heat pump activation without using the chlorinator controller and using the one pump used for filtration (additional controller required)


An on-board pump output relay can activate the main filtration pump by using it in combination with a "single pump controller" without using the chlorinator timers needing to be activated which will stop over chlorination but still use a single supply pipework for the pool. This set-up is best when only single pipework is available from pool and

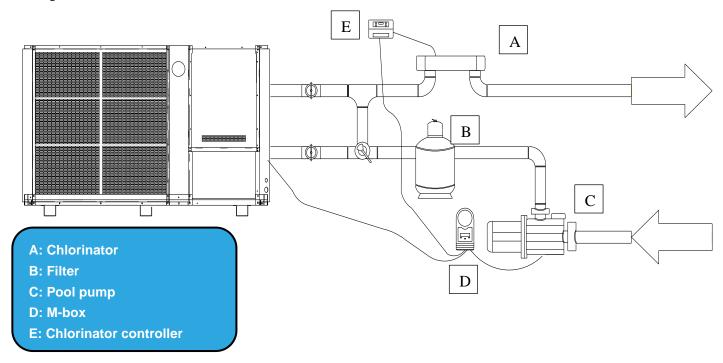


- **1-** Termination points are labelled P1-P2 from the on-board relay and is activated by the timers and pool temperature, and will continue to run the pump until the heated water reaches the set temperature or the timer switches off.
- **2-** Once temperature is reached or the timer is finished the heat pump will switch off the relay output stopping the circulation pump.
- **3-** If the pool reaches temperature but the timer is still active the heat pump will switch off relay to stop the circulation pump. Whilst the timer is still active every hour it will run the circulation pump for 2 minutes to test the water temperature. If the temperature is 1 degree below set point the heat pump will continue to run the circulation pump and start the heating process again.
- **4-** P1 P2 relay up to 10A output for circulation pump (check total load on circuit when combined) (P1 and P2 is an output relay switch NOT active neutral terminals, please see wiring diagram for further information.)
- **5-** Heat Pump timers are set through the mobile application and required a Wi-Fi connection. If no Wi-Fi is present then additional external timer may be required (sold separately)
- **6-** On the single pump controller, connect the black power cable to a 240V GPO, connect the piggyback cord into the chlorinator, and plug the pump into the bottom of the controller.
- **7-** Connect the Fig 8 wire from the single pump controller to the P1-P2 terminals. (See single pump controller manual for more information
- **8-** Adjust parameter "P6" to 100 as per section E

• Individual circulation pump installation.

An onboard output initiates the circulation pump to start and stop from the heat pump itself based on temperature and timers. For use when there are dedicated heating pipes and to separate from the filtration timers.

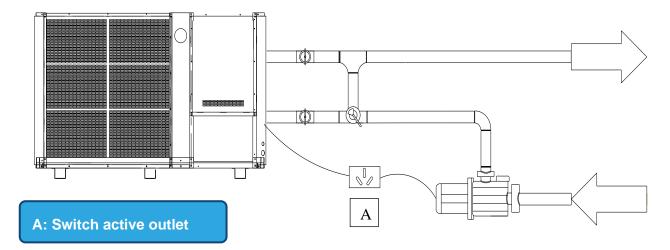


- **1-** Termination points are labelled P1-P2 from the on-board relay and is activated by the timers and pool temperature, and will continue to run the pump until the heated water reaches the set temperature or the timer switches off.
- **2-** Once temperature is reached or the timer is finished the heat pump will switch off the relay output stopping the circulation pump.
- **3-** If the pool reaches temperature but the timer is still active the heat pump will switch off relay to stop the circulation pump. Whilst the timer is still active every hour it will run the circulation pump for 2 minutes to test the water temperature. If the temperature is 1 degree below set point the heat pump will continue to run the circulation pump and start the heating process again.
- **4-** P1 P2 relay up to 10A output for circulation pump (check total load on circuit when combined) (P1 and P2 is an output relay switch not active neutral terminals, please see wiring diagram for further information.
- **5-** Heat Pump timers are set through the mobile application and required a WiFi connection. If no WiFi is present then additional external timer may be required (sold separately)
- **6-** It is recommended to install a power point for the pump to plug into for any future service work to the pump which may be required.
- **7-** Circulation pump should be sized accordingly to suit the site conditions and flow required.
- **8-** Adjust parameter "P6" to 100 as per section E

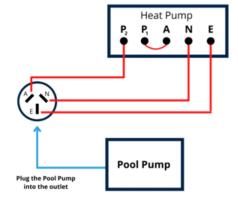

Solar retro

In some situations, when a heat pump is replacing a solar heating system, the pipework is available to be used next to the house but there is no way of adding a new electrical circuit to the pool equipment. With the use of an additional temperature sensor you can use the in-built flow switch to activate the heating. Allowing you to use the existing solar pump and to install the heater closer to the switch board.

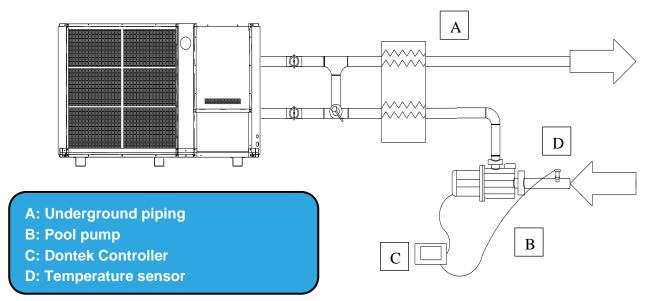

- 1- In may be impractical to get a new power cable from the house switch board to the pool equipment area due to finished flooring etc, in this case It may be possible to use the existing pipework which connects to the house and install a power cable from there.
- 2- An external thermostat controller can initiate the existing circulation pump, thus running the heat pump through the flow switch for full temperature control.
 Please speak to your installer for more information.
- 3- No additional wiring to the heat pump is needed internally
- 4- Timers are set on the external thermostatic controller
- 5- Set heat pump a couple of degrees above the set point temperature of the external temperature controller.

Automation systems and additional controls

The heat pump comes with easy to connect terminals in the electrical compartment labelled as 5 and 6.

The unit comes prewired with a bridge cable connected. To add an external control to activate the heat pump, remove the bridge and add in a volt free terminal connection. Please check with the automation system provider that the connection is volt free and the best way to install with their set-up.

If the external controller is not initiating the heat pump to operate the display with show the word "OFF"

e.

Operation Guidance

1. Key Function and screen display



Symbol	Heating & cooling models
	i. Power On/Off
	ii. Wi-Fi setting
	i. Lock/Unlock Screen
	ii. Heating mode (18-40°C)
	iii. Cooling mode (12-30°C)
	iv. Auto mode (12-40°C)
3	i. Boost 📶
	ii. Silence
	Temperature Setting

- a. Standby mode or Screen lock: Only symbol lights up, screen and other buttons turn darker.
- b. Power off mode: Only symbol will light up, No display on screen.
- c. The controller has a power-saving mode and will not display bright when locked.
- d. The controller has a built-in memory so all parameters are saved in the event of power loss

2. Operation Instruction

a. Screen Lock

- 1) Press (a) M for 3 seconds to lock or unlock the screen
- 2) Automatic Lock Period: 30 seconds if no operation

b. Power On

Press for 3 seconds to unlock screen, Press to power on machine.

c. Temperature Setting

Press and to display and adjust set temperature.

d. Mode Selection

Heating/Cooling/Auto

Press to switch between heating 🜣, cooling 🗱 and auto mode 🔾 "

Heating mode :: Water temperature setting range(18-40°C)

Cooling mode ***:** Water temperature setting range(12~30°C)

Auto mode \bigcirc : Water temperature setting range(12~40°C)

- * When water inlet temperature is higher than setting point, automatic cooling mode starts.
- * When water inlet temperature is lower than setting point, automatic heating mode starts.

Silence/Boost mode selection

Press to switch among boost mode 1, silence mode 1

Default mode: boost

Please choose boost mode 41 for initial heating

e. WIFI 🛜

When the screen is on, press of for 3 seconds, after flashing, enter Wi-Fi connection. Connect Wi-Fi on mobile phone and input password, and then control equipment by Wi-Fi. When APP connects Wi-Fi successfully, flights on

PLEASE SEE WIFI OPERATION GUIDE FOR FURTHER INFORMATION

f. Defrost cycle

• Automatic active defrosting

When the machine is operating in low temperatures it is very common for ice to build up on the external coil. The heat pump has a built in defrost protection program which will activate when it senses ice starting to form.

When machine is defrosting, 🔆 starts flashing; after defrosting 🤼 is on continuously

Forced defrosting,

If the heat pump requires manually defrosting for testing or a sensor is faulty please follow these instructions, the machine must be in heating mode and the compressor is working continuously for more than ten minutes, Whilst the unit is running, press and on the controller simultaneously and hold for 5 seconds. When the symbol is flashing, defrost has started, and will continue until the external coil temperature reaches a certain temperature adequate for continued operation. If the symbol stops flashing forced defrost has stopped.

Note: Defrost mode usually last for around 15 minutes, during this period, the heat pump fan will stop running, and relatively louder noise will be heard. The heat pump will reverse the refrigeration cycle in an attempt to melt any frost that have formed on the internal components, therefore its totally normal to witness higher condensation rate around the unit (Frost melting) and white smoke coming out of the unit (Water Vapor).

^{*}Note: the interval between forced defrosting should be more than 30 minutes apart.

f.

Testing and and Parameters

1. Heat pump checks before use

- a. The air inlets and outlets are free of any debris and are not obstructed.
- b. Refrigeration pipes or components are not installed in a corrosive environment.
- c. Check electric wiring connections are tight and adhere to the electrical schematic
- d. Check for water leaks around the machine and all new water connections

2. Refrigerant leak detection

- a. Leak testing is prohibited in enclosed areas
- b. Any source of ignition is prohibited during leak checks.
- c. Leak detection fluids can be used with most refrigerants but the use of products containing chlorine should be avoided as the chlorine may react with the refrigerant and corrode the copper pipe.
- d. Vacuum the machine completely before welding. Welding should only be carried out by a professional person in a service center.
- e. Please stop immediately if a gas leak occurs, and contact your local service center.

3. Trial Run

- a. The circulation pump must start before the heat pump and stop after the heat pump to avoid any damage occurring to the machine.
- b. In order to protect the heat pump, the machine is equipped with a time lag start function, the fan will run 1 minute earlier than the compressor when starting the machine, and it will stop running 1 minute later than the compressor when power off the machine.
- c. After the heat pump starts, check for any abnormal noises from the machine.

Running status codes and corresponding values

4. Running status check

- a. Press and hold for 5 seconds, a beep sound should be heard and it will enter into running status mode
- b. Use and to switch through the different values
- c. Press again to quit can running status mode

Symbol	Content	Unit
C0	Inlet water temp	$_{\mathbb{C}}$
C1	Outlet water temp	$_{\mathbb{C}}$
C2	Ambient temp	$^{\circ}$ C
C3	Exhaust temp	$^{\circ}$ C
C4	Outer coil pipe temp	$^{\circ}$ C
C5	Gas return temp	$^{\circ}$ C
C6	Inner coil pipe tem	$^{\circ}\!\mathbb{C}$
C9	Radiator temp	$^{\circ}$ C
C10	Electronic expansion valve opening	P

5. Parameters Checking

- 1.1 Press" and "O" together for 5seconds to enter "parameter checking" status, parameter code "NO.PO" will blink on the left, parameter value "2" will display on the right.
- 1.2 Press "Ney and "Ney to check the parameters."
- 1.3 Press "(1)" key to exit "parameter checking" status.
- 2. Modify parameters
- 2.1 In "parameter checking" status, press "To enter "parameter setting" status. At this moment the "parameter value" will blink.
- 2.2 In "parameter setting" state, press "O" and "O" to change the parameters value
- 2.3. Press "To confirm and return to the previous status; Or press "To quit and return to the previous status."

6. Parameter Table

NO.	Content	Adjust range	Step length	Default
P0	Water pump running way	0 : Continuation1 : Water temp control2 : time/water temp control	1	2
P1	Time setting (only available when the water pump running way is set to "2"	10 ~ 120min	5 min	60 min
P2	Compressor continuously running time in defrosting mode	30 ~ 90min	1min	35 min
P3	Defrosting start temp	-17 ~ 0℃	1℃	-7℃
P4	Defrosting running time	1 ~ 12min	1min	12 min
P5	Defrosting quit temp	8 ~ 30℃	1℃	13℃
P6	Single pump option	On/off 50~ 100	1	off
P10	Compressor speed control	0 : Auto, 1 : Manual	1	0
P12	Electronic expansion valve overheat level (heating	-10 ~ 20	1	3
P13	Electronic expansion valve overheat level (cooling)	-10 ~ 20	1	5
P14	Electronic expansion valve manual/auto	0: Auto, 1: Manual	1	0
P15	Electronic expansion valve opening setting (heating)	50 ~ 240	2P	175 (H5)
P16	Electronic expansion valve opening setting (cooling)	50 ~ 240	2P	175 (H5)
P20	Power off memory function	0 — NO, 1 — YES	1	1

g.

Commissioning

1. Flow Rates

OPTIMUM FLOW RATE DIFFERENTIAL FROM INLET TO OUTLET IS BETWEEN 2-3 DEGREES

Each Pool Heat Pump has a minimum flow rate requirement please check the specification table to ensure the circulation pump in use is adequately sized.

Calibrating the flow rate.

By using the running status function on the touch controller, it is easy to calibrate the check valves installed for optimum flow rates through the heat pump.

Madimack Heat Pumps have a built-in flow switch which will deactivate the heating function if not enough water flow is detected. The Heat Pump has a large range operation up to a seven-degree differential. If the temperature differential is above 7 degrees, the built-in flow switch or E6 Error will be displayed indicating not enough flow detected.

Recommended procedure

This has been installed level

- 1. Open all isolating valves
- 2. Fully close the by-pass and switch the unit on to max temp.
- 3. Wait 3-4 minutes until heat pump is at 100% Capacity
- 4. Check inlet and outlet temperature through on-screen controller (Check "Running status check" in the previous section to obtain C0 and C1 values)
- 5. Open the by-pass valve to increase temperature differential (The difference between C0 and C1 values)
- 6. Close the by-pass valve to decrease temperature differential (The difference between C0 and C1 values)
- 7. Once optimum temperature difference (2-3 C) achieved lock position of by-pass if possible.

Checklist

Unit has been installed level
Minimum ventilation requirements are correct to standards show in appendix K
Condensation drain pipe has been connected and drains away from unit
Rubber feet have been placed underneath unit
Warranty registration details have been filled out in section L
Temperature differential has been calibrated between 2-3


h.

Maintenance



"SWITCH OFF" power supply to the heater before cleaning or examination

- 1. In winter season when you don't swim:
 - a. Cut off power supply to prevent any machine damage.
 - b. Drain water clear of the machine.
 - c. Cover the machine body when not in use.

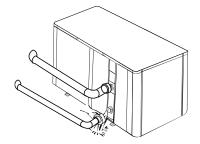



!!IMPORTANT:

Unscrew the water nozzle of inlet pipe to let the water flow out.

When the water in machine freezes in winter season, the titanium heat exchanger may be damaged.

- 2. Please clean this machine with household detergents or clean water, NEVER use gasoline, thinners or any similar fuel.
- 3. Check bolts, cables and connections regularly.
- 4. If repair or scrap is required, please contact authorized service center nearby.
- 5. Do not attempt to work on the equipment by yourself. Improper operation may cause danger.

Troubleshooting for common faults

1. Repairing Guidance



WARNING!

If repairs or removal is required, contact authorized service center.

Requirements for Service Personnel

- a. Any person who is involved with working on or breaking into a refrigerant circuit should hold a current valid certificate from an industry-accredited assessment authority, which authorizes their competence to handle refrigerants safely in accordance with an industry recognized assessment specification.
- b. Do not attempt to work on the equipment by yourself. Improper operation may cause danger.
- c. Strictly comply with the manufacturer's requirements when charging R32 gas and equipment maintenance. This chapter focuses on special maintenance requirements for swimming pool heat pump with R32 gas. Please refer to the technical service manual for detailed maintenance operation.
- d. Vacuum system completely before welding. Welding should only be carried out by professional person in a service center.

2. Problems without an error code

Failure	Reason	Solution	
	No power	Wait until the power recovers	
Heat numn desen't wun	Power switch is off	Switch on the power	
Heat pump doesn't run	Fuse is broken	Check and change the fuse	
	The breaker is off	Check and turn on the breaker	
For rupping but with	Evaporator blocked	Remove the obstacles	
Fan running but with insufficient heating	Air outlet blocked	Remove the obstacles	
msumcient neating	3-minute start delay	Wait patiently	
Display normal, but no	Set temperature too low	Set proper heating temp.	
heating	3-minute start delay	Wait patiently	

^{***}If above solutions don't work, please contact your installer with detailed information and your model number. Please don't try to repair it yourself. ***

Note

If the unit frequently trips the circuit breaker, please stop the machine immediately by switching off the main power and contact your dealer or local repair centre.

Error	Component corresponding	What did the error detect?	Solution	
E1	High pressure protection	High gas pressure switch	Check the water flow from the filtration pump and ventilation clearances. 2. Check high pressure switch is closed circuit 3. Replace PCB 4. replace inverter board	
E2	Low pressure protection	Low gas pressure switch	1. Check the water flow from the filtration pump and ventilation clearances. 2. Check low pressure switch is open circuit 3. Replace PCB 4. replace inverter board Check the water flow in pipes, and filtration pump is running. Check filters, skimmer basket, back wash Check the bypass or valves have not been adjusted since commissioned Check the Water flow switch	
E3	No water protection	Low water flowrate		
E4	3 phases sequence protection	Electrical power connection	Check the power connection to the pump	
E5	Power supply excesses operation range (Not failure)		1). Recover when back to the normal power2). Replace PCB	
E6	Excessive temp difference between inlet and outlet water (Insufficient waterflow protection)	High temperature difference	Check the water flow in pipes, and filtration pump is running. Check the bypass is opened and unit is commissioned Check the Water flow switch	
E7	Water outlet temp too high or too low protection	Water flowrate in pipes	Check if there is any blockage in the inlets, outlets, and through the pipe	
E8	High exhaust temp protection	Compressor overheating	Check if refrigerant gas is leaking, check the connection of the sensor, might need to change if faulty, check the compressor of the pump	
Eb	Ambient temperature too high or too low protection (not failure)	Out of the heat pump's capacity to withdraw heat from the atmosphere	Out of application range	
Ed	Anti-freezing reminder (not failure)		Wait for automatic recovery	
F1	Compressor drive module failure	Lack of phase	Check the voltage and the frequency conversion	
F2	PFC module failure	PFC circuit	Check the PFC switch circuit if short or not	

F3	Compressor start failure	Compressor circuit	Check the compressor wiring if its correct or if there is any short circuit
F4	Compressor running failure	Compressor circuit	Check the compressor wiring if its correct or if there is any short circuit
F5	Inverter board over current protection		 Wiring Inverter board PCB
F6	Inverter board overheat protection	Inverter board high temp	Check the current flowing it might need to
F7	Current protection		 Power off and restart Inverter board Compressor
F8	Cooling plate overheat protection		 Power off and restart Check fan motor Check cooling plate
F9	Fan motor failure	Fan motor	Check the fan motor wiring, check if the fan is broken or loose
Fb	Power filter plate No-power protection	Power filter not working	Single Phase Model 1). Replace Inverter board 3 Phases Model 1). Replace power filter plate
FA	PFC module over current protection	Solar inverter voltage change Power black out Power surge	 Initial power testing has completed. Power off and restart (happens install with solar PV) Replace Inverter board
P1	Water inlet temp sensor failure	The water inlet temperature sensor is either damaged or running a short circuit	Check the Temperature sensor at the water inlet, might need to be changed
P2	Water outlet temp sensor failure	The water outlet temperature sensor is either damaged or running a short circuit	Check the Temperature sensor at the water outlet, might need to be changed
Р3	Gas exhaust temp sensor failure	The sensor is running a short circuit, damaged, or not fixed properly	Check the gas exhaust Temperature sensor, might need a replacement
P4	Evaporator coil pipe temp sensor failure	The sensor is running a short circuit, damaged, or not fixed properly	Check the evaporative coil pipe Temperature sensor, might need a replacement
P5	Gas return temp sensor failure	The sensor is running a short circuit, damaged, or not fixed properly	Check the Gas return Temperature sensor, might need a replacement
Р6	Cooling coil pipe temp sensor failure	The sensor is running a short circuit, damaged, or not fixed properly	Check the cooling coil pipe Temperature sensor, might need a replacement

Р7	Ambient temp sensor failure	The sensor is running a	Check the Ambient Temperature
		short circuit, damaged, or	sensor, might need a replacement
		not fixed properly	
P8	Cooling plate temp sensor	The sensor is running a	Replace inverter board
	failure	short circuit, damaged, or	
		not fixed properly	
P9	Current sensor failure	The sensor is running a	1). Replace inverter board for single
		short circuit, damaged	phase model
			2). Replace power filter plate for 3
			phases model

j.

Wi-Fi operation

For video tutorials and further help please visit www.Madimack.com.au FAQ for all you need to do and full walkthrough. It is crucial that the WiFi is over the machine and is of a high power, the WiFi is a cloud based solution and needs the WiFi to be active on the machine for it to receive a signal.

- 1. Make sure to switch off your data package on your phone prior pairing the heater, Mobile data can interrupt the connection process in some cases therefore failing to connect the unit.
- 2. Your phone should be displaying full Wi-Fi strength with -50 DB > to ensure that you have enough signal strength for the heater to connect
- 3. To reset the Wi-Fi settings on the heater, do the following:
 - a) Unlock the controller by holding the lock button on the far left for 3 seconds, the buttons will illuminate indicating that the controller is unlocked.
 - b) Hold The power button (for about 10 seconds) till you see the Wi-Fi signal on the controller flashing slowly
 - c) Slow Wi-Fi signal blinking means that the settings have been reset, follow the same instructions below to pair the heater with your mobile device

1 InverGo Download



Android



iOS




2 Account Registration

Register by e-mail or third-party application.




a. E-mail registration.

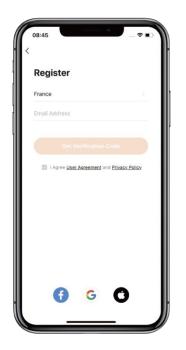




b. Register through third-party application

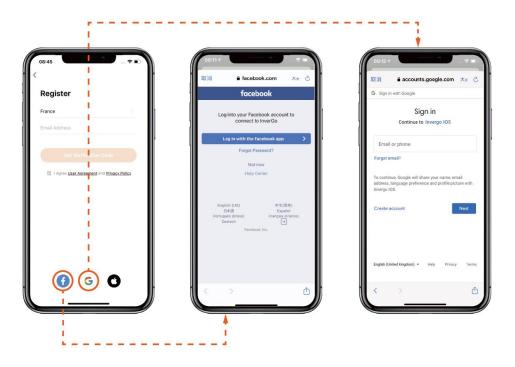

3 Create Family


Please set family name and choose location of device.

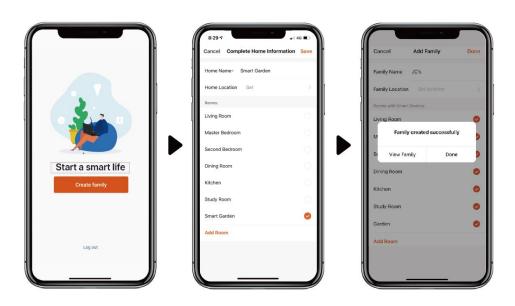




a. With Bluetooth

- 1. Please confirm that you're connected to Wi-Fi and your Bluetooth is on.
- 2. Click "Add Device", and then follow the instructions to pair device.

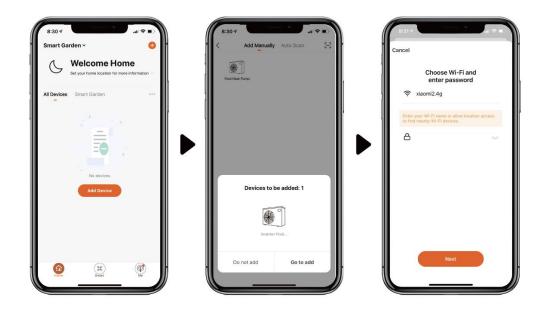

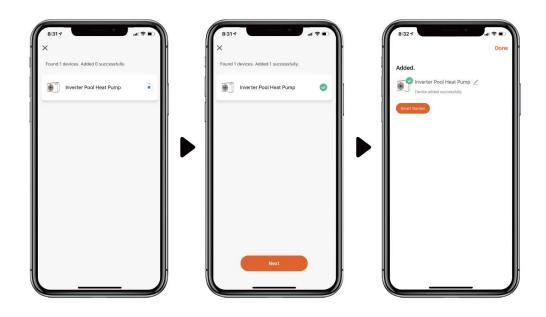


a. With Wi-Fi

- 1. Please make sure you are connected to Wi-
- 2. Press "am" for 3 seconds to unlock the screen. Press "(1)" for 3 seconds and release. After hearing "Beep", enter Wi-Fi password in app. During connection, "in will flash. Once the app connects to Wi-Fi successfully, "in will display.



3. Click "Add Device", and then follow the instructions to pair device.

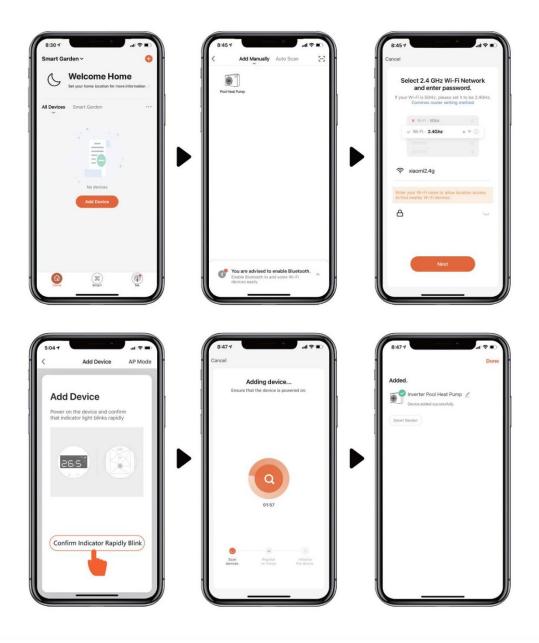



1. For heat pump with Heating function only:



2. For heat pump with Heating&Cooling function:



Heat Pump Warranty Agreement This Warranty applies to domestic and commercial products purchased and installed in Australia.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Your Australian Consumer Law guarantees, and similar statutory rights, are called the "Owner's Statutory Rights" in this Warranty.

THE RIGHTS GIVEN BY MADIMACK AUSTRALIA 2 YEARS

WARRANTY ARE IN ADDITION TO THE OWNER'S STATUTORY

RIGHTS.

The Madimack Pty Ltd ("Madimack") equipment listed on the back of this card is warranted by Madimack against defects in design, materials and workmanship for a period of up to 2 Years from the date the equipment is purchased by the original owner.

Equipment defects covered by this Warranty will be repaired or replaced at the discretion of Madimack (subject to the Owner's rights under the Australian Consumer Law with respect to major failures) without cost to the owner for parts or direct repair labour. The repair or replacement shall be performed during normal business hours by Madimack or a repair agent authorised by Madimack.

Any Madimack parts or Madimack equipment replaced under this Warranty will be warranted in accordance with the provisions of this Warranty for the remainder of the original warranty period or 12 months from the completion of the repair, whichever is the greater. Except where inconsistent with the Owner's Statutory Rights and the rights given by this Warranty, all other warranties and all liability of Madimack for any loss or damage direct and consequential is expressly excluded.

This Warranty DOES NOT cover: -

- a) Damage or problems or unsatisfactory performance caused to the equipment by faulty or incorrect external electrical wiring, incorrect power supply, voltage fluctuations, over voltage transients or electromagnetic interference not originating within the equipment.
- b) Damage or problems resulting from incorrect or poor installation.
- c) Damage or problems caused by the use of an accessory, component or equipment not supplied by Madimack.
- d) Damage or problems caused by storm, fire, flood, vandalism, misuse, negligence, Acts of God, earthquake, war, vermin, foreign matter entering the equipment (e.g. dirt and moisture) or any other outside agency.
- e) Damage or deterioration to the external surfaces or refrigeration coils caused by normal weathering or corrosive atmospheric conditions.
- f) Any costs or additional labor associated with gaining acceptable service access to equipment installed in restricted or unsafe (e.g. high) locations.
- g) Freight charges (including insurance) or travelling cost for repairs performed outside the area normally serviced by Madimack or a repair agent authorized by Madimack.
- h) Equipment which has been installed in a transportable or mobile application (e.g. caravan or boat).
- i) Equipment which has been re-installed in a transportable or mobile application (e.g. caravan or boat).
- j) Equipment which has been re-installed at a location other than the original location.
- k) Any consumable item (e.g. batteries, filters, and belts) supplied with the equipment unless the item is shown to be defective at the time of purchase.
- Damage or problems or unsatisfactory performance resulting from operation in an environment where the climatic comfort of humans is not the primary function of the equipment.
- m) Damage or problems or unsatisfactory performance resulting from operations at conditions outside the operating conditions specified in the Madimack technical or sales literature applicable to the equipment.
- n) Damage, problems or unsatisfactory performance resulting from misapplication of the equipment. Where this Warranty does not apply, the Owner's rights are limited to the Owner's non- excludable Statutory Rights.

Owner's Responsibility

The owner is responsible for the correct operation and regular maintenance of the equipment as listed below. The correction of any non-product fault or problem is not covered by this warranty.

- a) Operation and maintenance of the equipment in accordance with the operating instructions.
- b) Regular cleaning of the air filter(s) and replacement where necessary.
- c) Ensuring that the air inlet and outlet on the outdoor unit is kept clear of any obstructions (e.g. dirt, leaves, plants)
- d) Ensuring that the condensate drain is kept clean.
- e) Replacement of exhausted batteries.
- f) The application of additional corrosion protection if the product is installed in a corrosive environment (e.g. Industrial pollution, sea air).

Owner's Statutory Rights

In respect of any goods supplied under the contract which are not of a kind ordinarily acquired for personal domestic or household use or consumption, unless the owner establishes the following limitation of liability would not be fair and reasonable, the liability of Madimack for any defect of design, materials or workmanship will be limited to any of the following as determined by Madimack: -

- a) Replacing the equipment or supplying equivalent equipment;
- b) Repairing the equipment;
- c) Paying the cost of replacing the equipment or acquiring equivalent equipment;
- d) Paying the cost of having the equipment repaired.

Making a claim

The following steps should be taken when making a warranty claim with Madimack Pty Ltd.

- 1. Owners experiencing issues with their system are to contact Madimack Pty Ltd service departments online portal to and provide the requested information.
- A service agent will review the provided information and will contact you on the provided phone number to try and solve the issue
- 3. If the issue cannot be dealt with over the phone, owners will be supplied with details of service agent in their area
- Owners will need to contact and deal with service agents directly in relation to the booking in and payments of works
 related to the service or repair of their Madimack Pool Heat Pump
- 5. Owners can claim reimbursement for costs of works covered under the product warranty when completed by an approved Madimack Service Agent. When making a claim, owners will need to provide the following documents
 - a) Proof that you are the original system owner original invoice showing owner name and property address
 - b) Copy of invoice from an approved Madimack approved service agent
 - c) For a major defect a copy of the report for major defects from approved Madimack Service agent
 - d) All Service Claim Submissions will be processed and reimbursement on validated claims paid into owner nominated account within 7 business days.

Product Purchase Warranty Registration



Supplied by

Please complete all the details below from the installer and store this card along with the purchase docket in a safe place.

Please take 2 or 3 photos of the installation and with this information upload them online at https://www.madimack.com.au/warranty-registration or use the barcode scanner to go direct to the page.

Date of Purchase	
Installed by	
Installer No (if applicable)	
Date of Install	
Owners full name	
Address of Premises	
Telephone number	
Make	
Model	
Serial	
Commissioning	
By pass valve fitted?	
Temperature difference	
Notes	

